

Why does my TV Guide say "To Be Announced" on every channel?

Last Modified on 06/21/2021 2:08 pm EDT

If you have recently lost power or unplugged your converter, DTA or TiVo this will happen. It may take a few hours to completely re-load the information for your on-screen channel guide. Otherwise, try unplugging your converter, DTA or TiVo for 10 seconds and plugging it back in to re-start the channel guide download process. If you still need assistance, please contact your local office at 877.955.SECV or [chat us live](#).
