

I have a converter, why do I constantly see "pixels," "tiling" or "little squares" at the bottom of my screen?

Last Modified on 04/08/2021 5:33 pm EDT

Make sure the cable line is connected tightly on the back of your converter, TV, and wall outlet. If that does not correct the picture, contact your local office at 877.955.SECV or [chat us live](#) for assistance.
