

How do you view your Favorite Channels list?

Last Modified on 11/27/2024 12:58 pm EST

To view your Favorite Channels follow the below steps:

1. Press the **MENU** button on your remote control to access the **QUICK** menu.
2. Press the **RIGHT** arrow button until the **HEART** icon is highlighted.
3. Press the **OK/SEL** button. You will be taken to a screen with the title Favorite Lists in the upper left corner. By default List 01 will be highlighted.
4. Press the **OK/SEL** button. An onscreen guide of the channels you defined as favorites, including programming information, will be displayed.
5. Navigate this list just as you would the full on-screen Guide.

In order to change/channel surf between your favorite channels press the **FAV** button on remote. You will automatically be tuned to the next channel on the your Favorites list. To get instructions on the operation of your specific remote, go to our [remote control support page](#) and select the remote control image that most closely resembles the one you have in your home. This will open into a PDF of the operating instructions.
