

How do I delete a saved/recorded program?

Last Modified on 06/22/2021 4:40 pm EDT

There are two options to delete a saved/recorded program.

1. Prompted delete: After you have finished watching a recorded program, a dialogue box will appear on the screen that asks you if you would like to delete the program. You can also manage your storage space by manually deleting programs.
 2. Manual delete: To do this press the **MY DVR** button on your remote control and select the program you wish to delete. Then press the **OK** button and scroll to the X at the bottom of the screen and press **OK** again.
-