

What are the lock/unlock options?

Last Modified on 11/27/2024 4:04 pm EST

The lock icon indicates the selected item is 'locked' and requires a PIN for access. The unlock icon indicates the selected icon is 'unlocked' and the channel or program may be viewed.
