

# What are the lock/unlock options?

Last Modified on 06/24/2021 4:25 pm EDT

The lock icon indicates the selected item is 'locked' and requires a PIN for access. The unlock icon indicates the selected icon is 'unlocked' and the channel or program may be viewed.

---